Set-Up Step 2: Installing the Napster System Management

Insert the Installation CD into your PC and follow the directions to install Napster. Follow the on-screen instructions as the InstallShield Wizard guides you through the installation. When the installation is complete, click [Finish] and start the Napster Application.

CHECK THE "SPECIAL OFFER" INSERT FOR YOUR 2-MONTHS TRIAL OFFER TO NAPSTER!

napster.
To begin enjoying your Samsung Napster Player and your FREE 2-Month subscription to Napster, install the FREE Napster software now.
To transfer audiobooks to your Samsung Napster Player and get up to 2 FREE audiobooks, install the FREE AudibleManager application today.
Install Driver & Utilities
Install napster.
Install AudibleManager
Napster
Listen to and collect over 700,000 tracks available through Napster.
Exit
System Requirements
Windows 2000 or XP, Microsoft Internet Explorer 5.01 or higher, Windows Media Player 9 Series.
Connection of 33.3K or greater

Napster BETA build 2.9.9.0 Software Setup
Napster version 2.9.9.0 setup status
Setup has finished upgrading all components on your computer.
Start Napster now!
Click Finish to complete.
Finish
Click

Note :

- This software is only compatible with Windows XP & 2000 operating systems.
- ONLY music files transferred via Napster Software or Windows Media Player (9 or above) can be played on your device. Please be advised transferring files via drag n' drop will only store, NOT PLAY.

Set-Up Step 3: Importing Your Existing Music

You can use Napster to import existing WMA or MP3 files into your Napster library. Once these imported tracks are in your Napster Library, you can add these tracks to playlists and transfer them to your Samsung Napster Player.

To import WMAs or MP3s into your Napster Library:

1. Select [Import Track(s) to My Library] from the [File] drop-down menu on the Napster application.
2. Browse to and select the directory where the tracks are located from the [Folder] window on the left.
3. Select the particular tracks from the [Files] window on the right. To select multiple tracks, hold down the [Ctrl] or [Shift] keys while selecting, or click [select all].

AH68-01619B(Rev 2.0)

Set-Up Step 4: Transferring Music to Your Samsung Napster Player

Tracks that you purchase through Napster can be transferred seamlessly to your Samsung Napster Player using the Napster application.

To transfer tracks from your Napster Library to your Samsung Napster Player:

1. Locate the track(s) or playlist that you want to transfer in your Library.
2. Click and hold the mouse on the track(s) or playlist, then drag the tracks to the listed Samsung/Napster YH-920 icon in the left window of your Napster Library (refer to the following figure)

3. The progress of the transfer displays under Transfer Status. To view transfer status, click on the + in front of Samsung/Napster YH-920 under your Library to expand the sub-folders, and then click on [Transfer Status].

4. When the tracks have finished transferring, the status is listed as Complete.

Set-Up Step 5: Connecting the YH-920 to your PC

Once battery is fully charged, press the On/Off button to turn on the power. Connect the USB cable as shown below to the PC and the Charger. Remove the cover on the YH-920 and connect the other end of the USB cable to the DC in USB terminal.

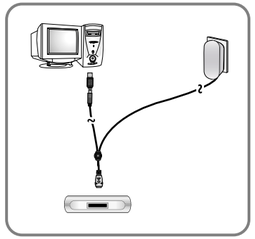

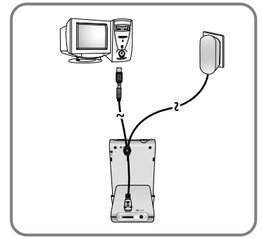

Samsung Napster YH-920 Quick Start Guide

System Requirements

Operating System: Windows 2000 Service Pack 4 or Windows XP
Processor: Pentium-class CPU equivalent or better
Memory: 64MB of RAM minimum
Hard Disk: Approximately 9 to 12 MB for the Napster installer and 100 MB for Windows Media Player 9 Series (if not already installed)
Browser: Microsoft Internet Explorer version 6.0 or higher
Windows Media Player 9 Series
Active Internet connection
USB Requirement: USB 2.0 required for maximum transfer rate
CD-ROM Drive

Resolution Tips

- Windows XP™ or 2000™ is required to install & use the Napster software. It is recommended to upgrade OS if the Napster software will not install.
- Transferring songs to the YH-920 can only be accomplished through a USB port. Install a USB card if your PC does not have one.

Note :

- For any questions regarding this product dial 1-800-SAMSUNG or visit us on the web at www.samsung.com

Take a moment to familiarize yourself with the controls and terminals of the YH-920 before charging the battery.

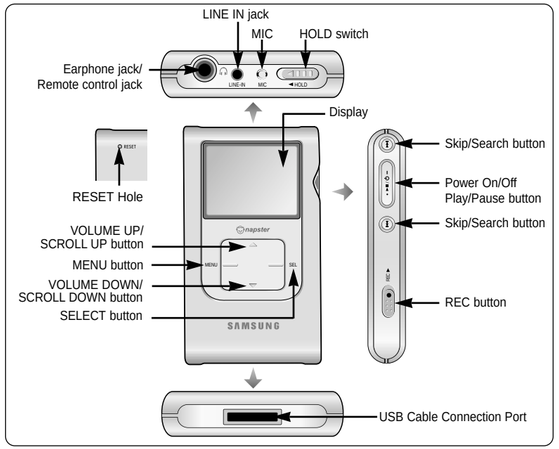

Refer to User Manual for description of Remote Control.

WARNING

Unplugging the YH-920

Never unplug the device without first safely disconnecting it.

Napster™, Program: Click File ➔ Disconnect portable device.

Windows 2000: Click the "unplug/eject" icon on your Windows taskbar and follow the instructions in the message box that appears.

Windows XP: Click the "Safely Remove Hardware" icon on your Windows taskbar and follow the instructions in the message box that appears.

Windows 2000

Windows XP

Note :

- The Napster software is only compatible with Windows XP & 2000 operating systems.

Set-Up Step 1: Initial Battery Charging

Attach the USB plug end of the Charger to the DC IN USB Charger terminal of the YH-920. Plug the other end of the Charger into the wall outlet.

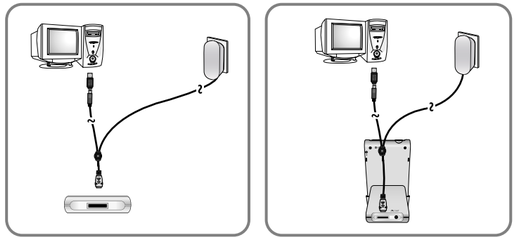

When charging is complete, “Charging Complete” is shown in the display. The first time the battery is charged, it will take approximately 3 hours. Battery recharge time in normal operation is approximately 2 hours.